

2
Built in Screen
External Screen




ismart®

Discover your smart life!

Full HD **Satellite Receiver** with **internet Tv**

1080P

Full HD

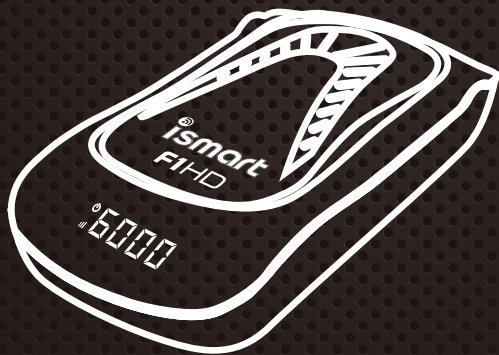


QUICK GUIDE

A. What's in the Box?



 F1 HD U.S Edition



Remote Control



USB WIFI



Quick Guide



Two Screw & Anchor



 
External Digit Sensor



Power Adapter




HD Cable








3x1 AV Cable

What's included

-  F1 HD Satellite Receiver
-  Quick Guide
-  Power Adapter
-  3x1 AV Cable
-  Remote Control * 2
-  External Digit Sensor
-  Two Screw & Anchor
-  HD Cable
-  USB WIFI


What you need

-  TV
-  F1 HD Satellite Receiver
-  Coaxial Cable
-  Low Noise Block
-  Satellite Antenna

B. What to do?

Step 1. Satellite Dish Connection


Connect your receiver to Dish and TV

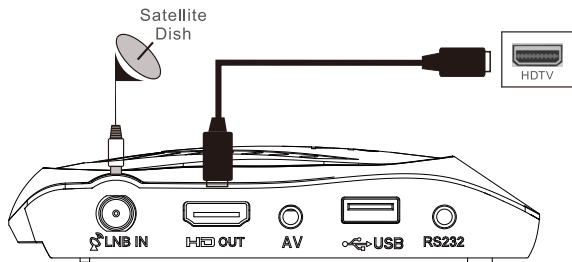

OR


Step 2.

Receiver to TV With Digital A/V Output

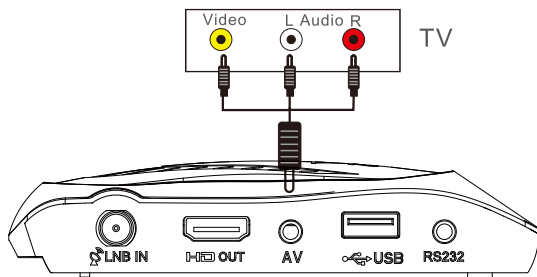


Step 3.

Connect to power supply and **external Digit Sensor**

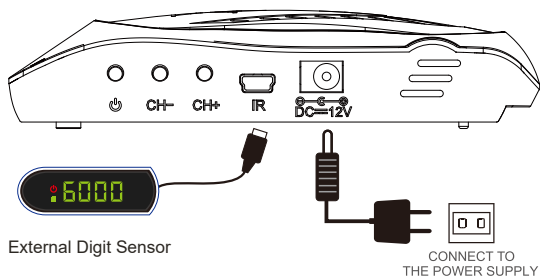


Step 4.

Connect to USB device

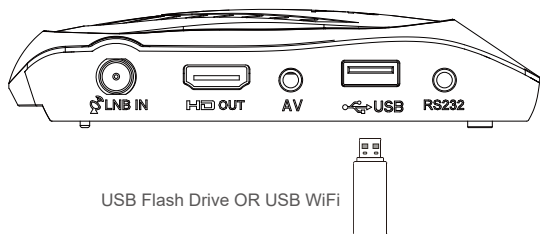

LNB IN: CONNECT TO SATELLITE ANTENNA


CONNECT TO USB DEVICE

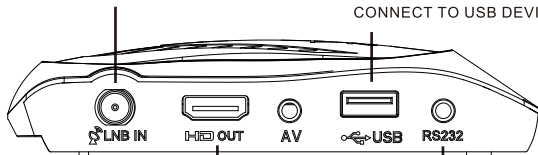

CONNECT TO HD TV

CONNECT TO A PC FOR SYSTEM RECOVERY

CONNECT TO AV TV PORT

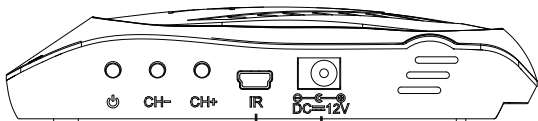


CONNECT TO POWER SUPPLY

CONNECT TO EXTERNAL IR DIGITAL SENSOR

English

C. How to update?

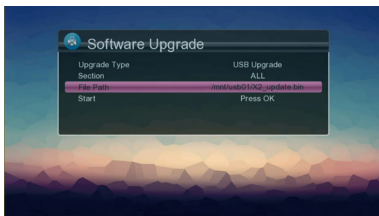

Upgrade Type:
Select between Software Upgrade and Dump.

Section:
select between ALL, App, User,.


Press OK key at File Path item to pop up a drop list to select the File path.

Start: Press OK key to start upgrade.

D. Know your RCU.






Installing Batteries in the Remote Control

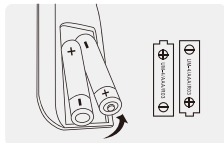

Key	Function
	Standby/On, Standby/Off
	When watching a channel, mute the sound
VEDIO	Play the video files from USB
SUB	Switch to subtitle mode
ZOOM	Enter into zoom-in mode
FIND	To find a channel by typing name
	Press to fastforward or fastbackward
	Previous or next
PAUSE	Press once to pause the screen picture, press once again to go to the normal mode
	Play and pause
	Stop recording
REC	Record the program
SAT	Display the satellite window
EPG	Call up the EPG (Electronic Program Guide)
DISPLAY	To change the TV Screen mode between 1080i , 1080p , 720 , NTSC & PAL
TP	To show Satellite TP list
EPG	Call up the EPG (Electronic Program Guide)
INFO	Show information of the current channel
CH	When watching a channel, change channels or move to the next higher or lower item in the menu
VOL	When watching a channel, adjust the volume or move to the left or right item in the menu
OK	Executes the selected item in the menu screen or enters the desired value in any input mode
MENU	Press this key one time to run menu on screen
EXIT	Return to the previous menu on the menu screen or escape from the menu
FAV	Displays the favorites group list
AUDIO	Displays the Audio Settings
VOL	When watching a channel, adjust the volume or move to the left or right item in the menu
PAGE	Page up and page down
0-9	Enter number of the required menu item or select a channel number to watch
RECALL	Switches to previous channel
TV/R	Switches between TV and Radio mode
USB	Display external device window
NAVIGATION	Press to navigate left / right / up / down. Press OK to confirm your choice.

E. Troubleshooting

Problem	Solution
No or Bad Signal	<p>For satellite tuner module</p> <ul style="list-style-type: none"> • Check the LNB; Replace the LNB if necessary. • Check the cable from the LNB. • Check the position of the dish; realign dish if necessary. • If you are using a DiSEqC 1.0 switch, check that you have connected and programmed the LNBs to the correct connections on the switch. <p>Common features for all types of DVB receivers</p> <ul style="list-style-type: none"> • Check the "Signal Level" and the "Signal Quality."
poor picture quality	<ul style="list-style-type: none"> • See "No Picture" above. • Check the signal level, if this is low then tries adjusting the alignment of your dish.
No Picture	<ul style="list-style-type: none"> • See "Does not display any message on the front panel" above. • To match the STB system with your TV system (PAL/NTSC), Press TV Format "DISPLAY" Button until a picture is displayed. • Check the video output port is firmly connected to the TV or VCR. • Check that you have selected the video Input on your TV. • Check the brightness level of the TV. • Check the resolution that your TV supports, and set the proper resolution with the remote Resolution button to obtain a picture.
Does not display any message on the front panel	<ul style="list-style-type: none"> • Check the main power cable and check that it is plugged into a suitable power outlet.
No Sound	<ul style="list-style-type: none"> • See "No Picture" above. • Check the volume level of the TV and STB. • Check the Mute status of the TV and STB.
Remote control does not operate	<ul style="list-style-type: none"> • Point remote control directly towards the STB. • Check that the STB button lights up when you press any button. • Check and replace batteries.

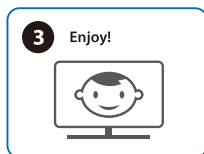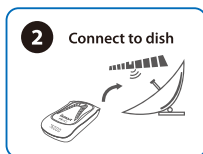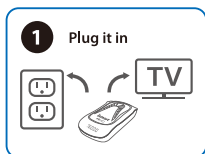

Now, your F1 HD
is ready for your use!



**USER MANUAL
DOWNLOAD**



STOP

**Please do not return
this unit**

If you are having problems operating
this Receiver,

For web support please visit
support@ismartt.com


NOTES

Handwriting practice lines consisting of 18 horizontal dotted lines.



F1HD

If you are experiencing any difficulty
operating this product, contact us :

 support@ismartt.com

www.ismartt.com